


# Instruction Sheet

**UNITED STATES  
STOVE CO.**

EST<sup>d</sup> 1869

**US1261DST**



854099

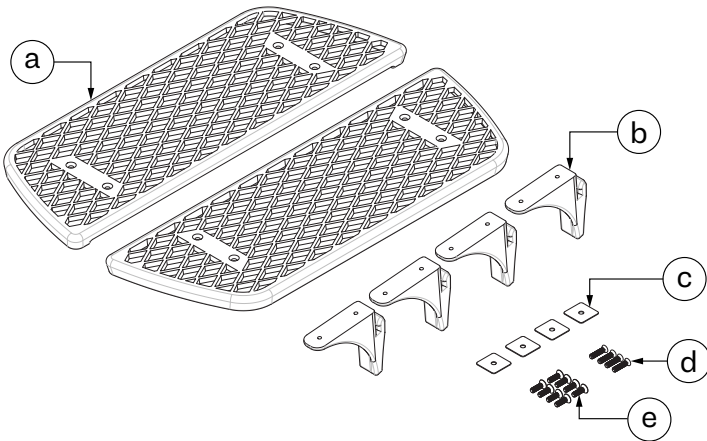

Key	Description	Qty
a	Side Table	2
b	Table Bracket	4
c	Shim	4
d	M6 x 22 Phillips Head Machine Screw	4
e	M6-1 x 20mm Hex Drive Metric Machine Screw	8


1. Align the outer hole of the main top with the corresponding hole in the table bracket (b). Hook the table bracket (b) onto the lip of the main top as shown.

2. Use one of the four (4) provided M6 X 22 screws (d) to secure the table bracket (b) to the main top. Repeat this process for the other three brackets.

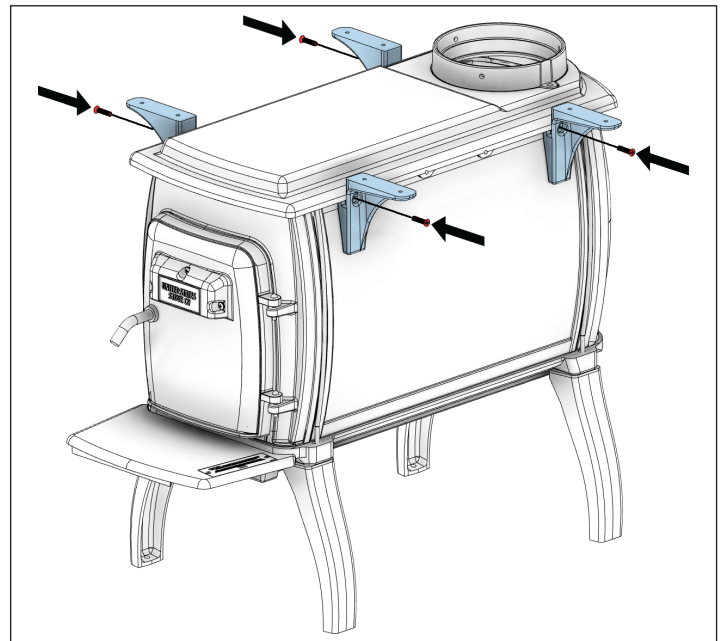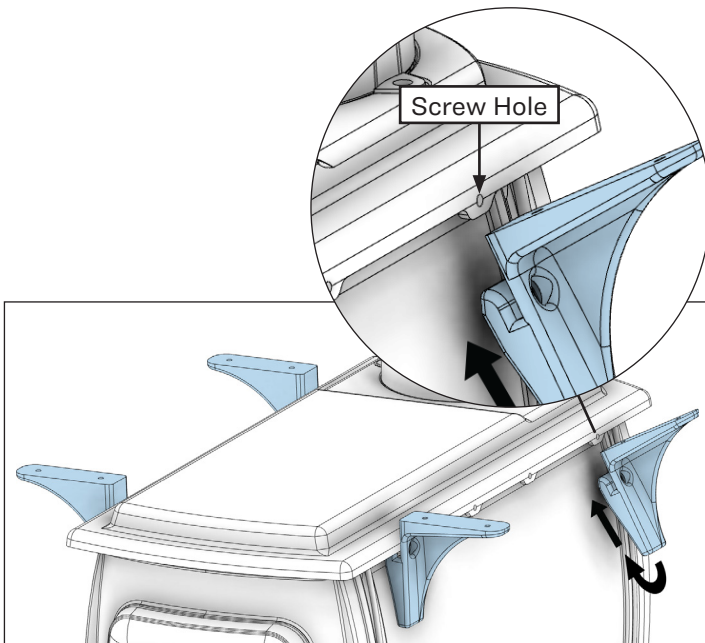


**IN ORDER TO MAINTAIN WARRANTY, COMPONENTS MUST BE REPLACED USING ORIGINAL MANUFACTURERS PARTS PURCHASED THROUGH YOUR DEALER OR DIRECTLY FROM THE APPLIANCE MANUFACTURER. USE OF THIRD PARTY COMPONENTS WILL VOID THE WARRANTY.**


3. Place the left and right side tables (a) onto the table brackets (b).

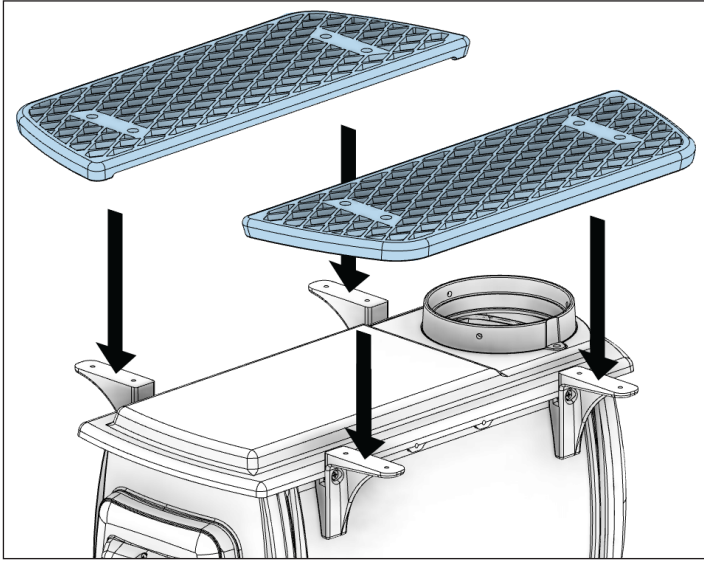


4. Secure them in place using the eight (8) included M6-1 x 20mm screws (e).

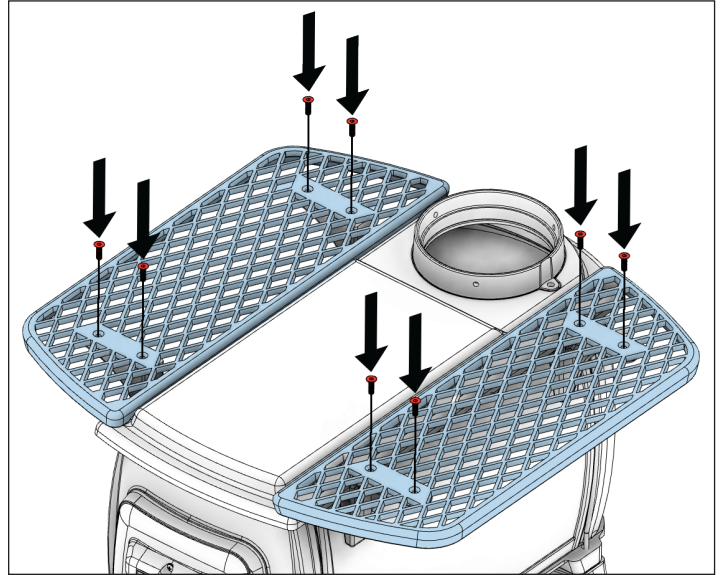


Note: Four (4) shims (c) have been provided for the purpose of leveling the side tables (a), if necessary.

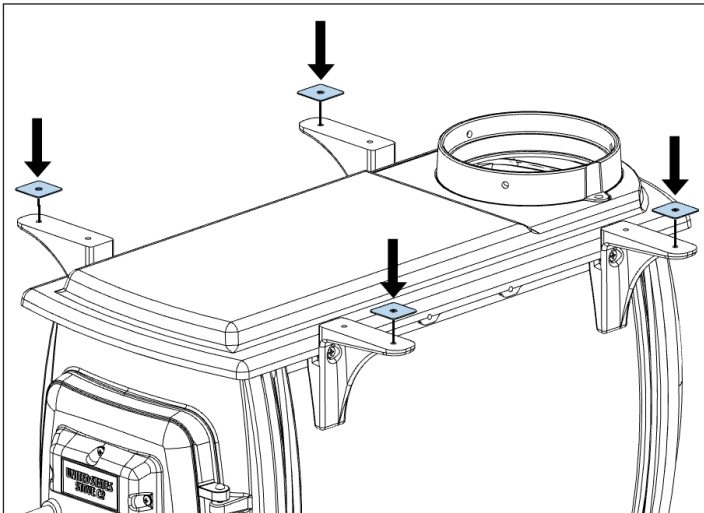


3. Placez les tables latérales gauche et droite (a) sur les supports de table désignés (b).

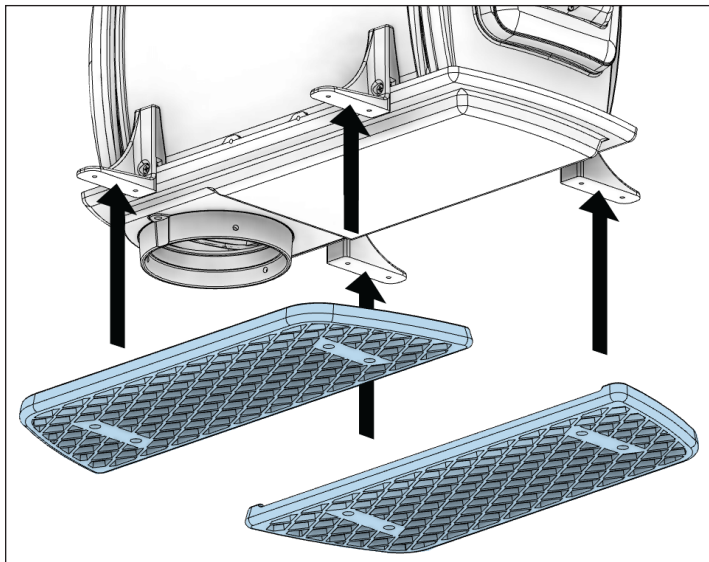

Remarque : Quatre (4) cales (c) ont été fournies dans le but de mettre à niveau les tables d'appoint (a), si nécessaire.

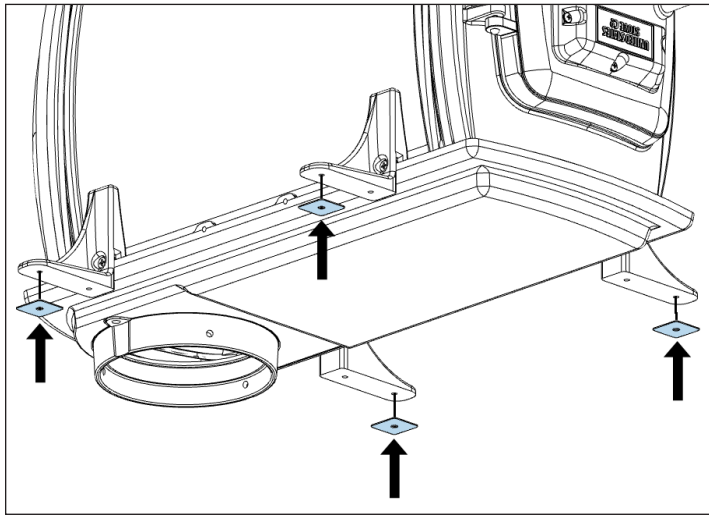


4. Fixez-les en place à l'aide des huit (8) vis M6-1 x 20 mm fournies (e).

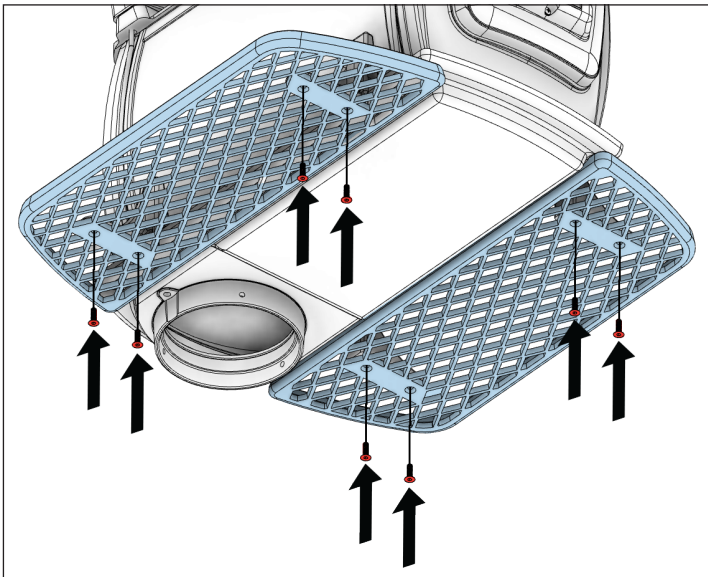




## US1261DST


Clé	Description	Qté
a	Table d'appoint	2
b	Support de table	4
c	Cale	4
d	Vis à métaux à tête Phillips M6 x 22	4
e	Vis à métaux métrique à entraînement hexagonal M6-1 x 20 mm	8

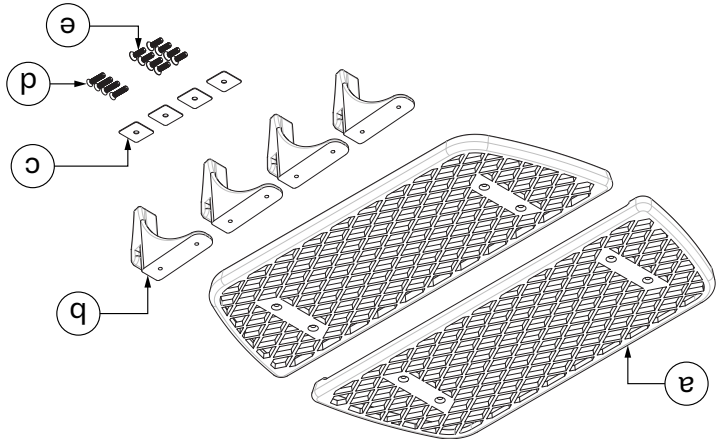

2. Utilisez l'une des quatre (4) vis M6 X 22 fournies pour fixer le support de table au dessus principal. Répétez ce processus pour les trois autres supports.

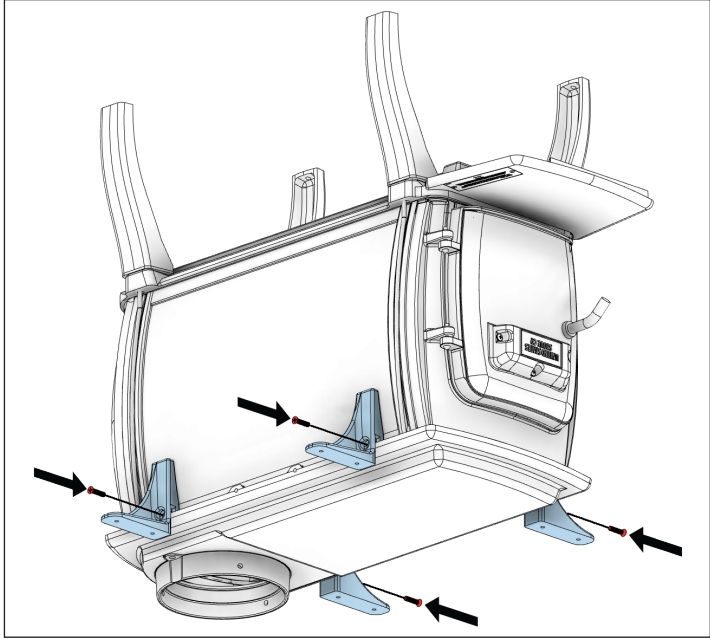

1. Alignez le trou extérieur du plateau principal avec le trou correspondant dans le support de table. Accrochez le support de table sur le rebord du plateau principal, comme illustré.

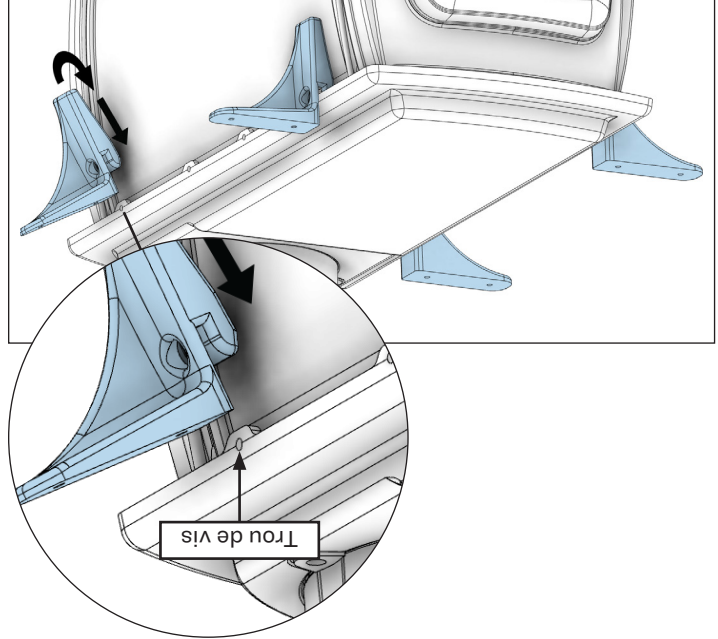

**AFIN DE MAINTENIR LA GARANTIE, LES COMPOSANTS DOIVENT ÊTRE REMPLACÉS À L'AIDE DE PIÈCES D'ORIGINE DU FABRICANT ACHETÉES PAR VOTRE REVENDUEUR OU DIRECTEMENT AUPRÈS DU FABRICANT DE L'APPAREIL. L'UTILISATION DE COMPOSANTS TIERS ANNULERA LA GARANTIE.**